


1974 FIAT WIRING DIAGRAM

124 SPIDER

DESCRIPTION OF COMPONENTS

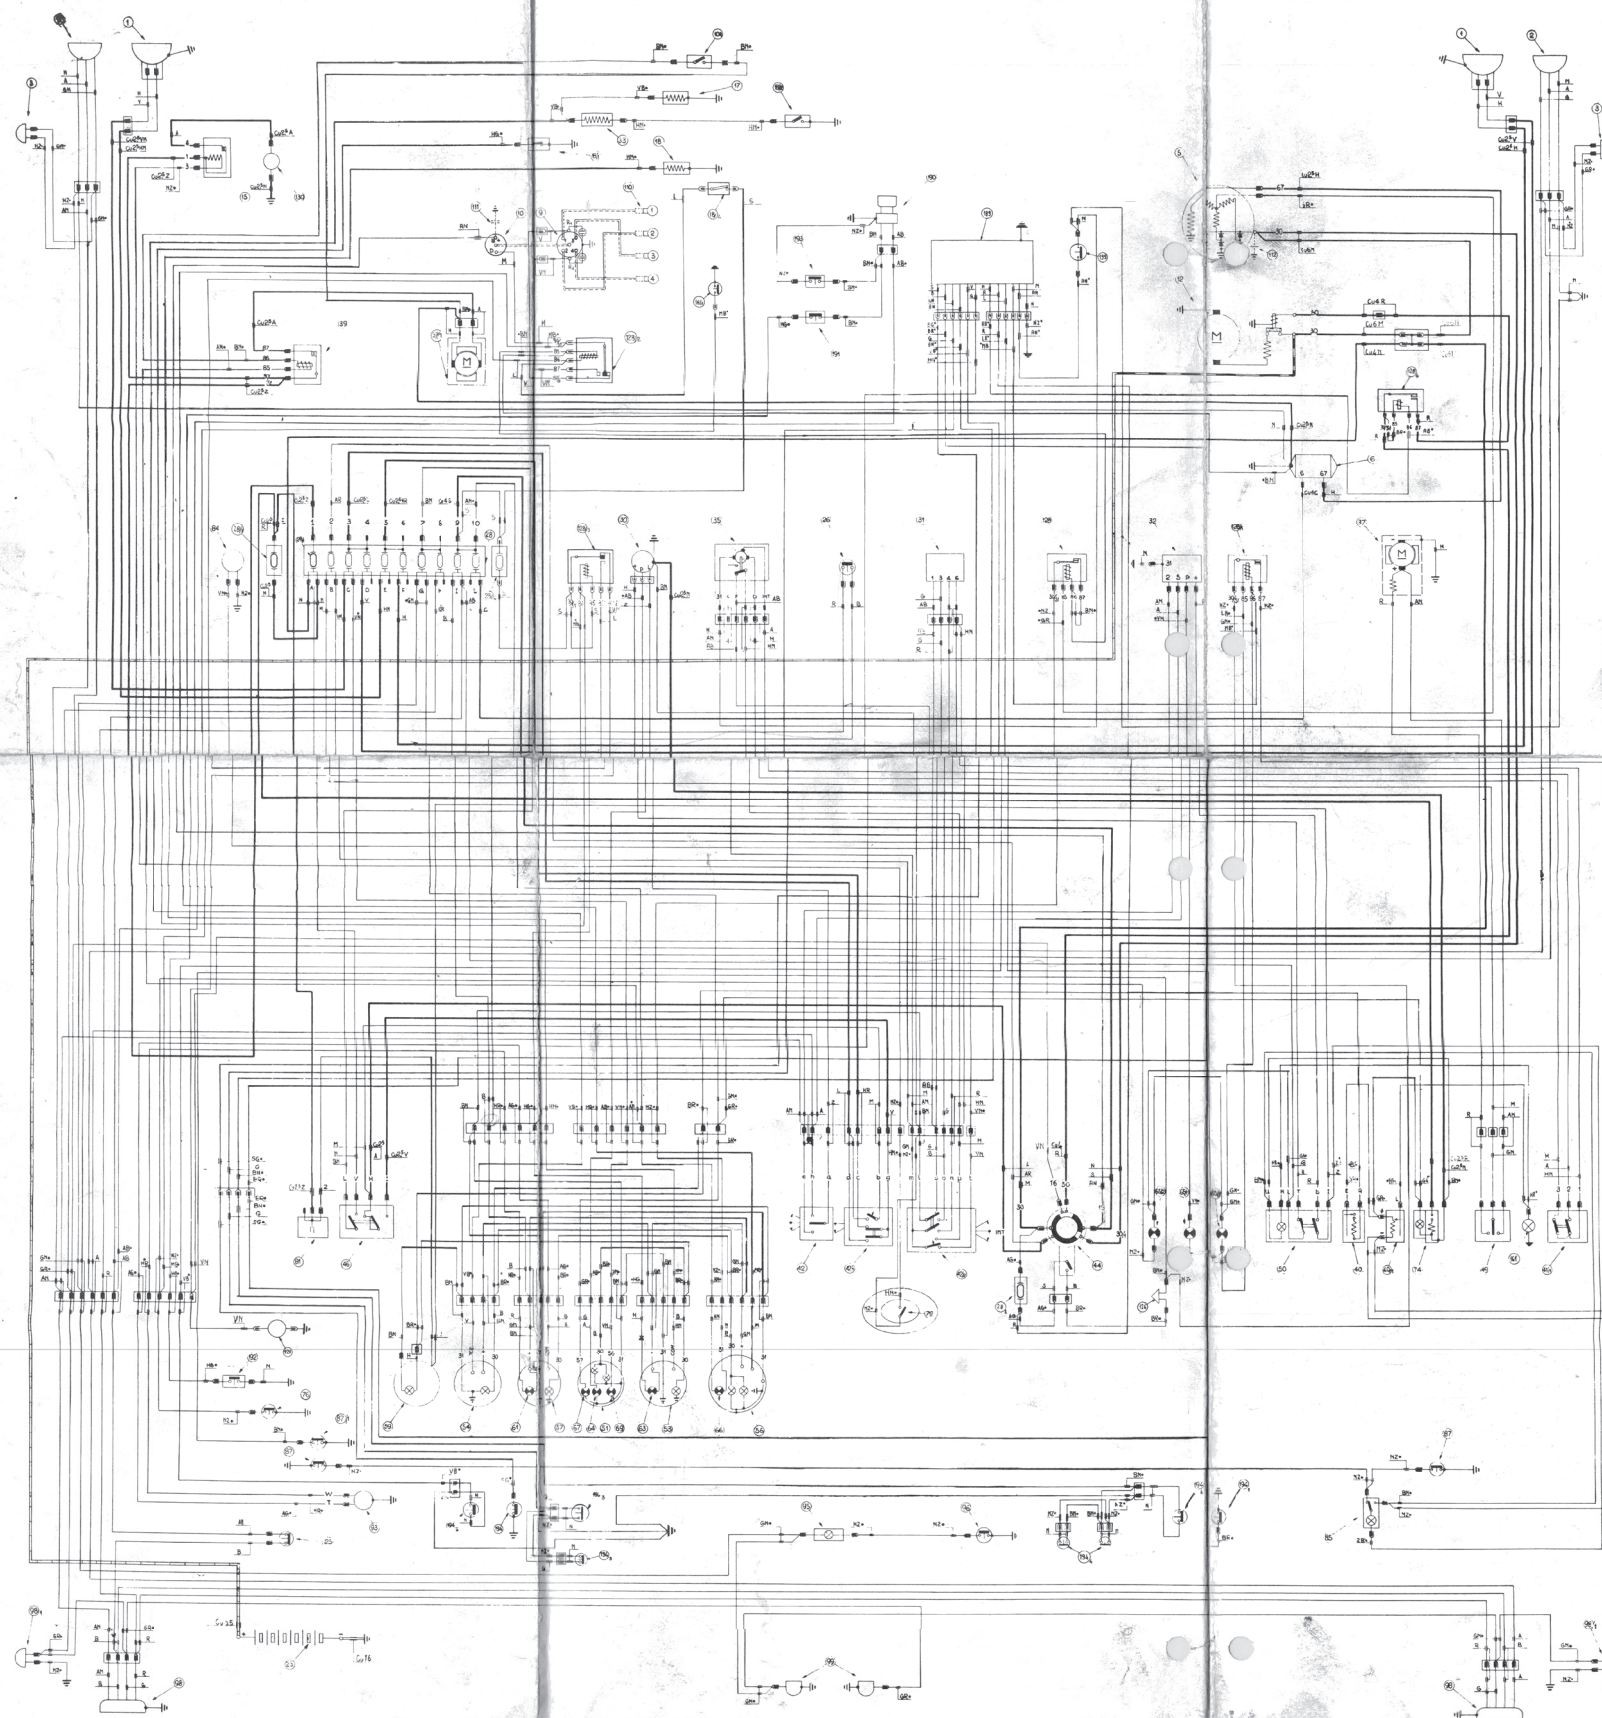

- 1 High/Low beam headlights
2 Front parking and turn signal lamps
3 Front side marker lamps
4 Alternator
5 Voltage regulator
6 Ignition distributor
7 Ignition coil
8 Starter motor
9 Horn relay
10 Engine water temperature gage sending unit
11 Oil pressure indicator sending unit
12 Low oil pressure indicator sending unit
13/2 Thermostatic switch for engine water temperature gage
14/3 Brake system effectiveness indicator switch
15/4 Thermostatic switch for ignition mode selection relay control
16 Battery
17 Back-up lights switch
18 Stop light switch
19 Fuses
20/1 16-Amp fuse
21/2 3-Amp in-line fuse
22/3 5-Amp in-line fuse
23/4 8-Amp in-line fuse
24 Turn signal flasher
25 Windshield wiper intermittent cycling switch
26 Vehicular hazard warning signal flasher
27 Engine water temperature gage resistor
28 Two-speed windshield wiper motor
29 Two-speed heater fan motor
30 Engine fan motor
31/1 Relay for motor 37/1
32 Instrument cluster light rheostat-switch unit
33/1 Windshield wiper motor speed selection relay
34 Turn signal indicator switch
35/1 High/Low beams change-over switch
36/2 Wiper/washer three-position switch
37 Steering lock ignition switch
38 Lighting switch (controls also headlights)
39 Heater fan motor three-position switch
40 Vehicular hazard warning signal switch with incorporated light
41 Speedometer
42 Oil pressure gage
43 Engine water temperature gage
44 Tachometer
45/1 Fuel gage
46 License plate lamps
47 Fuel reserve indicator (Red)
48 Low oil pressure indicator (Red)
49 Turn signal indicator (Flashes Green)
50/1 Vehicular hazard warning indicator (Flashes Red)
51/2 Brake system effectiveness indicator (Red)
52/3 Fasten belts indicator (Red)
53 Battery charge indicator (Red)
54 Parking and tail lights indicator (Green)
55 High beams indicator (Blue)
56 Cigar lighter with housing indicator
57 Hand brake ON switch
58 Horn button
59 Current receptacle
60 Washer pump motor
61 Courtesy light with switch
62 Courtesy light jamb switch
63/1 Remove key indicator jam switch (driver's door)
64 Fuel gage sending unit
65 Trunk light
66 Trunk light switch
67 Tail, turn signal, stop and back-up lights unit
68/1 Rear side markers lamps
69 License plate lamps
70 Thermostatic switch (on radiator) for motor 37/1
71 Fuel pump
72 Fasten belts and remove key buzzer
73 Battery charge relay
74/1 Relay for buzzer 72
75/2 Ignition mode selection relay
76/3 Fuel pump and ignition mode relay control switch
77 Starter relay
78 Horn compressor
79 Light source, optical fiber illumination
80 Interlock system electronic control unit
81 Exhaust gas recirculation control valve
82 Button switch on clutch for EGR valve control
83 Exhaust emission control device electrovalve
84 Button switch on driver's seat belt
85/1 Button switch on passenger's seat belt
86/2 Gear-engaged signal button switch
87/3 Strip switch in driver's seat cushion
88/4 Strip switch in passenger's seat cushion
89 Interlock by-pass switch

WIRING COLOR CODE

- A - light blue
B - white
C - amber
G - yellow
H - grey
L - dark blue
M - brown
N - black
R - red
S - pink
V - green
Z - violet
AB - light blue/white
AB - light blue/yellow
AB - light blue/black
AB - light blue/red
BB - white/black
BB - white/red
CB - amber/white
GB - yellow/black
GB - yellow/red
HB - grey/yellow
HB - grey/black
HB - grey/red
LB - dark blue/red
MB - brown/white
NB - black/violet
RV - red / green
SV - pink/yellow
VB - green/white
VB - green/black
ZB - violet/white